


Required Components for Installation:

- (1) SMW7J
 - (1) C300P Camera
 - (1) ADD25F Heavy Duty Mount
 - (1) Manual
- Ordered and shipped separately from SMW7J system
- (1) CB006 5m. 15 ft. FM/FM camera cable
 - (1) CBS202 trailer socket

Wire Connection Key:

- Red wire to Ignition hot (+) 10-24v. DC
- Black wire to GND (-)
- Brown trigger wire for camera 1 to backup light on tractor
- ~~(Optional) Blue trigger wire for camera 2 to turn signal~~

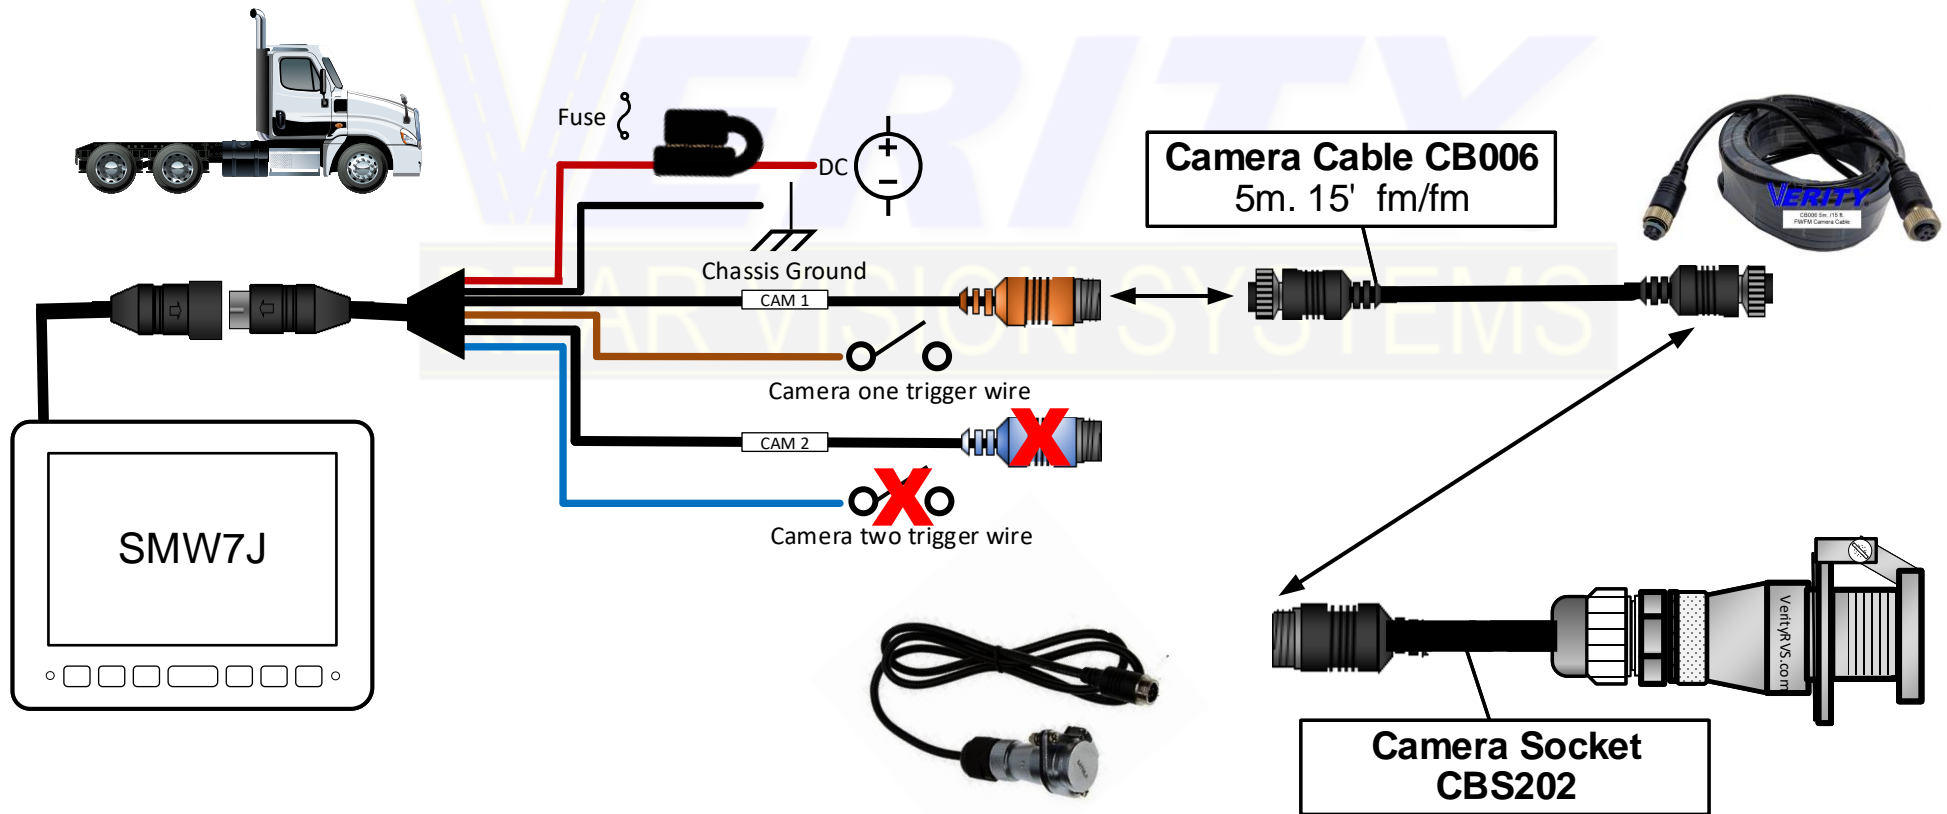

574-807-6002

www.verityvs.com
All rights reserved.

NOTICE

Diagram is for reference purpose only
Subject to change without notice. Not to Scale

04/2019

REV-4HR

SM07J/SMW7J/SM05J
Day Cab Wiring Layout