


Required Components for Installation:

- (1) monitor
- (1) monitor cable
- (1) monitor mount
- (1) CBK202 Coil Cable Kit: 1) socket and 1) 16' coil cable
- (1) CB006 5m. 15' 4-pin F-F 5m camera cable



This end to trailer

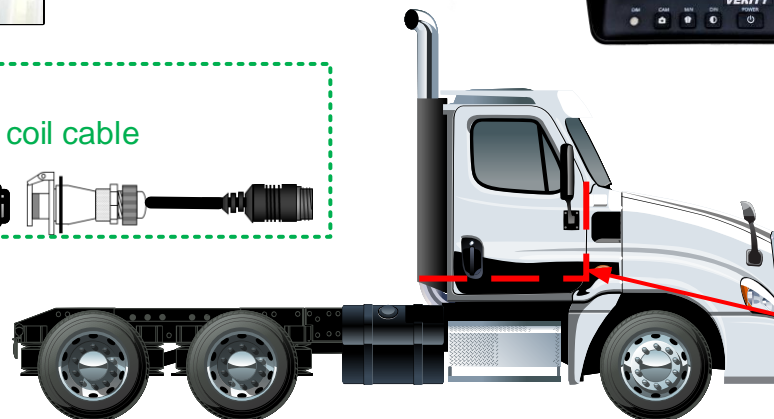

CB006 5m. 15' camera cable from monitor to back of cab

For retro install, consider optional DCTKIT install kit